




HUNG-RITE

Hung-Rite Equipment Hanger OWNER'S MANUAL

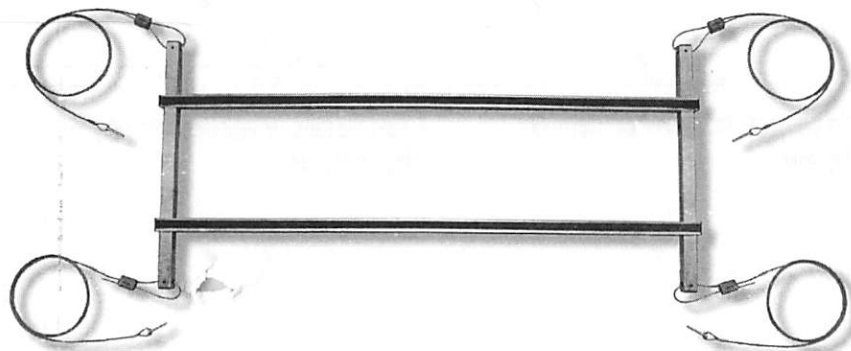

WARNING:

Please carefully read and understand all INSTRUCTIONS before using product. This product should be installed by a trained professional. Failure to follow the steps and safety rules provided may result in serious personal injury.


PRODUCT#: HRHGR66-W10
US PATENT USD653,064S

Threaded Rod Installation (optional method)


 Threaded rod is not included with product.

1. Unpackage support system from box.
2. Unfold the hanger.
3. Measure and determine location to attach (4) threaded rod to structure.
4. Once threaded rod is suspended, attach (1) 3/8th hex nut & (1) 3/8th washer to end of the (4) rods leaving approx. (2 in.) of space for hanger and hardware.
5. Insert rod into hanger.
6. Apply another 3/8ths washer & nut onto the end.
7. Fasten the 3/8ths nuts until completely tight with wrench.
8. Insure hanger is leveled correctly.
9. Now, just place your equipment horizontally centered on the Hanger.

Threaded rod installation examples

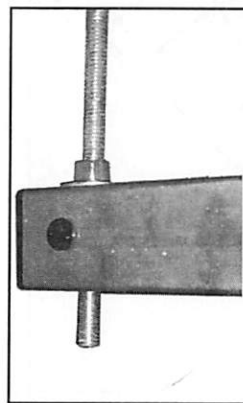

Apply 3/8th nut & washer before fitting hanger onto threaded rod.

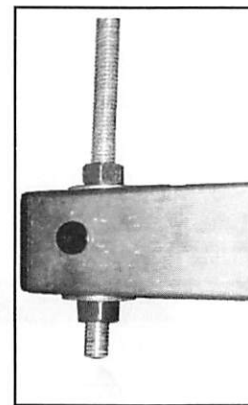


Apply second set of 3/8th nut & washers and tighten with wrench.

BASIC INSTALLATION

1. Unpackage support system from box.
2. Unfold the hanger.
3. Measure and determine location to attach (4) cable bolts to support the structure.
4. Install bolts by drilling (4) 3/8" holes into solid, approved structure.
5. Insert 3/8ths X (31/2 in) bolt with (1) washer & (1) nut attached.
6. Apply the washers.
7. Fasten the 3/8ths nuts until completely tight with wrench.
8. Level the Hanger using the cable locks. To adjust the locks pull or push the metal wire in the direction imprinted on either side of the lock while inserting the release key into the cable lock.
9. Now, just place your equipment horizontally centered on the Hanger.


PROPER CABLE USAGE

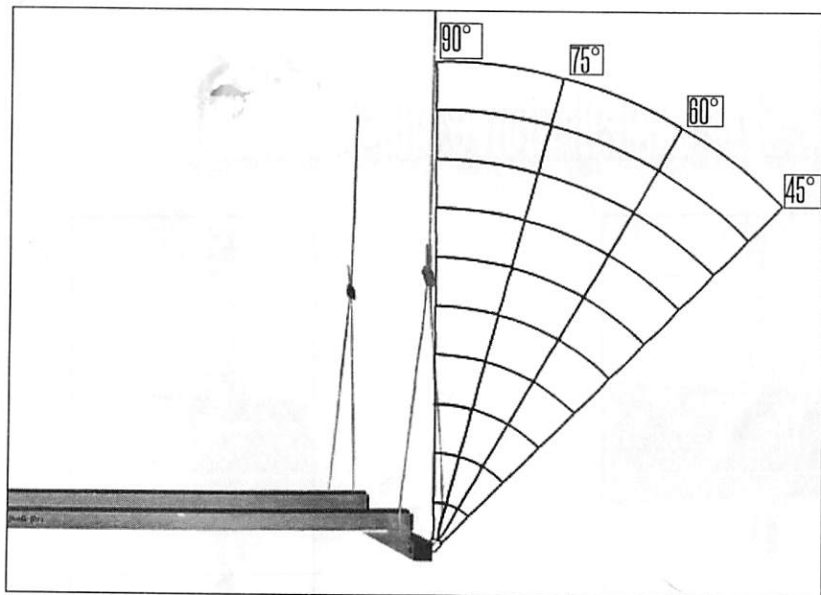


The MAXIMUM safe working load limit for this unit is 400 pounds. The safe range for the angle of the support cables is between 90°- 45°. The support cables MUST not fall below 45°. When installing you must keep the cables within the range of degrees shown above.

PROPER CABLE LOCK USAGE

INSTALL:

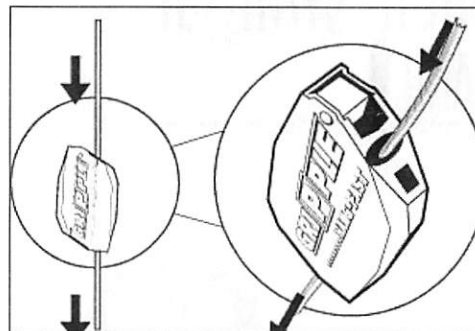


1. Push the cable end through one channel of the Gripper Fastener.

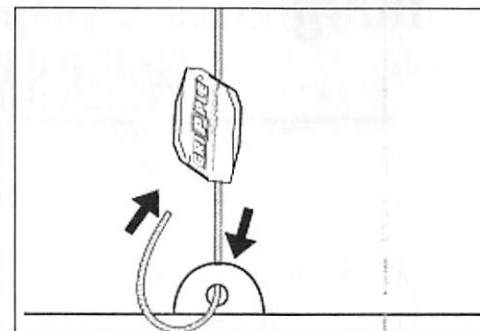


2. Pass the cable through the service or coiling attachment point

RELEASE:

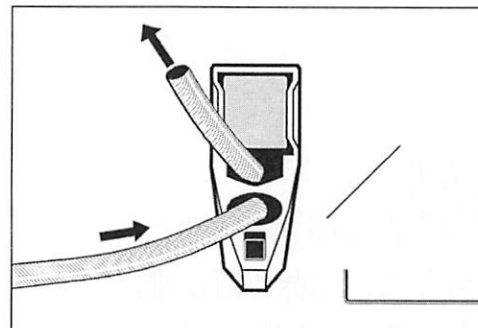

1. Make sure load is supported.

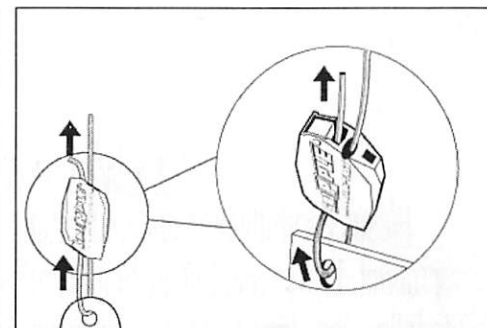

2. Press Setting Key into small hole of gripper fastener to release cable from the fastener and adjust the height of the service.